



Stop the  
Rust Monster  
with...



It doesn't cost  
...it pays!


Shoe numbers shown in red  
are available from  
STEMCO Rome.

## 16 1/2" Diameter




**EATON**  
extended service shoe  
for Meritor axles

Shoe #	Width	Lining
NS-4708Q	7"	4708

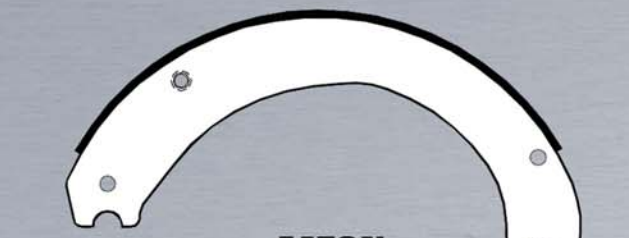

**EATON**  
(Extended Service and ESII)


Shoe #	Width	Lining
NS-4719E2	5"	4719
NS-4725E2	6"	4725
NS-4709E	7"	4709
NS-4709E2	7"	4709
NS-4726E2	8 5/8"	4726

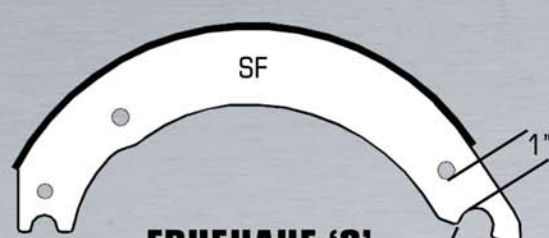

**FRUEHAUF 'Q'**  
Meritor design for  
Fruehauf application.  
Designated ESF or F5

Shoe #	Width	Lining
NS-4515F5	7"	4515E/G


NOT INTERCHANGEABLE  
WITH STANDARD 'Q'

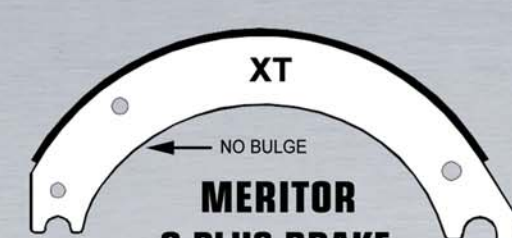

**MERITOR  
Q PLUS BRAKE**

Shoe #	Width	Lining
NS-4720Q	5"	4720
NS-4715Q	6"	4715
NS-4707Q	7"	4707
NS-4718Q	8"	4718
NS-4711Q	8 5/8"	4711


Requires ext. life s-cam.

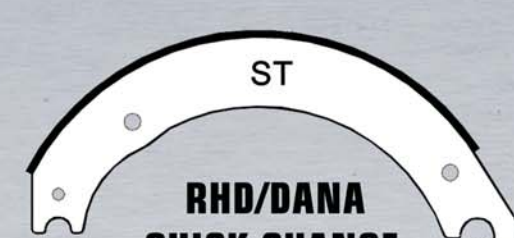

**RHD/DANA  
QUICK CHANGE**  
(Equivalent to 'Q' style)  
Features improved anchor slot design.

Shoe #	Width	Lining
NS-4549Q	4"	4549C
NS-4524Q	5"	4524B
NS-4524QM#	5"	4524B
NS-4514Q	6"	4514G
NS-4514QM#	6"	4514G
NS-4515Q	7"	4515E/G
NS-4644Q	8"	4644A
NS-4551Q	8 5/8"	4551B
NS-4552Q	10"	4552
NS-4514/49Q	10"	4514G/4549C


# offset pin location for Mack

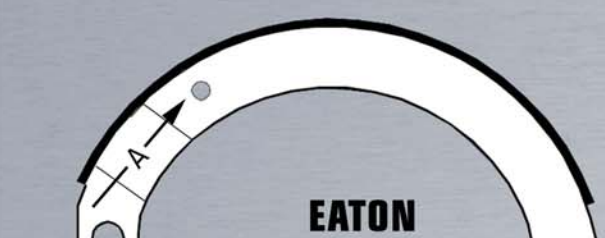

**EATON**  
SINGLE ANCHOR PIN

Shoe #	Width	Lining
NS-4223E	4 1/2"	4570
NS-4223EHM	5"	4223A
NS-4317E	6"	4317G
NS-4317EHM	6"	4317G
NS-4311E	7"	4311J/G
NS-4311EHM	7"	4311J/G
NS-4674E	8 5/8"	4674


Std. mount measures 4" at A.  
High mount is 3 9/16"

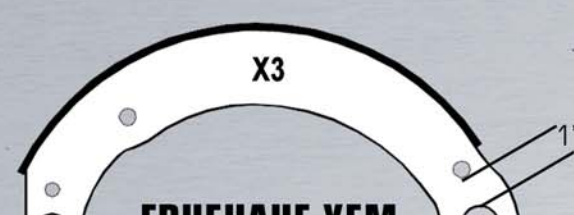


**FRUEHAUF XEM**  
3rd Design

Shoe #	Width	Lining
NS-4515X3	7"	4515E/G
NS-4551X3L*	8 5/8"	4551B
NS-4551X3R*	8 5/8"	4551B

\*offset webs

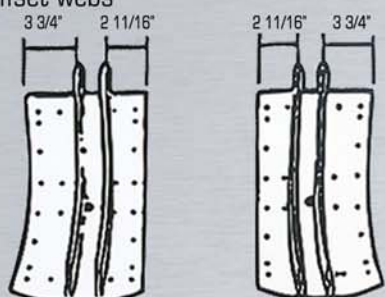

LEFT HAND RIGHT HAND  
Placement of offset webs

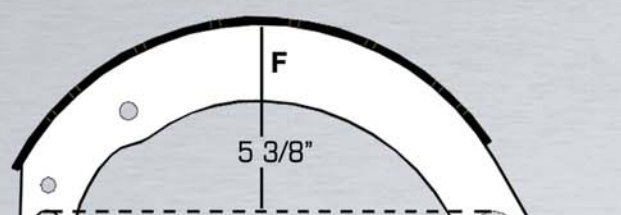

**FRUEHAUF  
'P' STYLE**

Shoe #	Width	Lining
NS-4515F	7"	4515E/G
NS-4551FL*	8 5/8"	4551B
NS-4551FR*	8 5/8"	4551B


\*offset webs



**MERITOR  
'P' STYLE**

Shoe #	Width	Lining
NS-4549P	4"	4549C
NS-4524P	5"	4524B
NS-4524PM#	5"	4524B
NS-4514P	6"	4514G
NS-4514PM#	6"	4514G
NS-4515P	7"	4515E/G
NS-4644P	8"	4644A
NS-4551P	8 5/8"	4551B
NS-4552P	10"	4552
NS-4514/49P	10"	4514G/4549C

# offset pin location for Mack

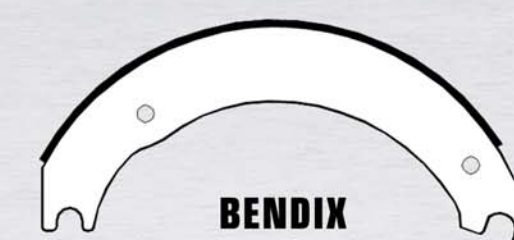

**BENDIX**  
(Ford Cargo)


Shoe #	Width	Lining
NS-4515BQ	7"	4515E/G

## 12 1/4" Diameter



**DANA**

Shoe #	Width	Lining
NS-4536DP	5 1/2"	4536B
NS-4692DP	7 1/2"	4692

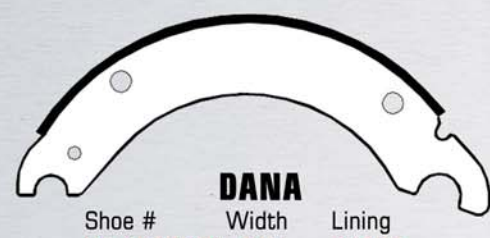

**DANA**


Shoe #	Width	Lining
NS-4536DFC	5 1/2"	4536B
NS-4692DFC	7 1/2"	4692



**DEXTER**  
LATE (PQ) STYLE

Shoe #	Width
NS-4700DX	4"
NS-4661CDX	5"
NS-4591DX	7 1/2"

Replaces early design quick maintenance (QM) style which was open on both ends.

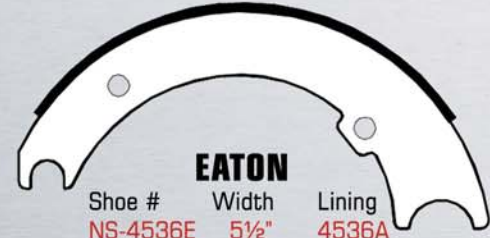

**EATON**

Shoe #	Width	Lining
NS-4536E	5 1/2"	4536A
NS-4591E	7 1/2"	4591



**MERITOR 'Q'**  
(fast change)

Shoe #	Width	Lining
NS-4670Q	7 1/2"	4670
NS-4591T	7 1/2"	4591



**STD. FORGE**

Shoe #	Width	Lining
NS-4536SF	5 1/2"	4536B
NS-4591SF	7 1/2"	4591

## 15" Single Web



**BENDIX WEDGE**

Shoe #	Width	Lining
NS-4605B	6"	4605
NS-4602B	7"	4602



**MERITOR WEDGE**  
Stopmaster


Shoe #	Width	Lining
---	3 1/2"	4562A
---	5"	4615
NS-4605S	6"	4605
NS-4602S	7"	4602



**EATON (ES)**  
Extended Service

Shoe #	Width	Lining
NS-1443E	4"	1443TT


Web stamping 807686

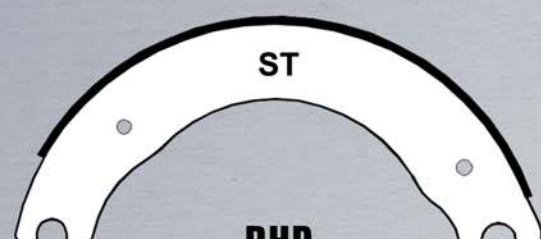

**RHD  
QUICK CHANGE**


Shoe #	Width	Lining
NS-1308Q/6649	4"	1308/1308TT

This shoe is equivalent to current Meritor 'Q'.  
Anchor opening is unique RHD anti-chatter design.

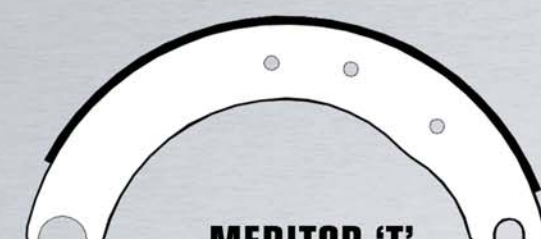

**MERITOR 'T'**  
(front)


Shoe #	Width	Lining
NS-1307P	3 1/2"	1307
NS-1308P	4"	1308

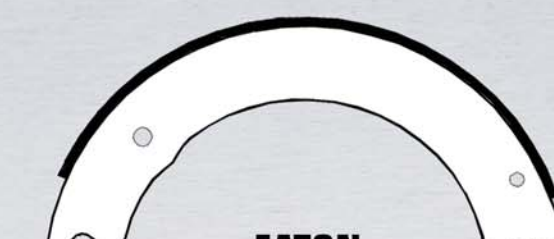

**EATON**  
(front)


Shoe #	Width	Lining
NS-1308E	4"	1308TT

## 15" Double Web

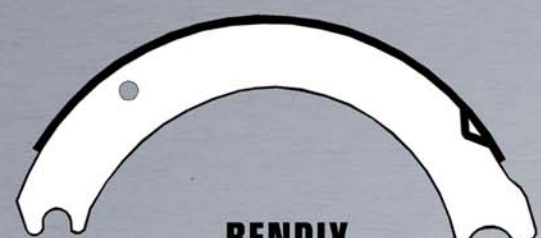

**BENDIX**  
(Ford Cargo front)

Shoe #	Width	Lining
NS-4693B	4"	4693

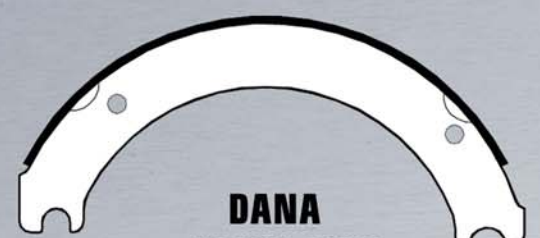


**DANA  
HEAVY AXLE**

Shoe #	Width	Lining
4693DHA	4"	4693



**EATON**

Shoe #	Width	Lining
NS-4729E	4"	4729

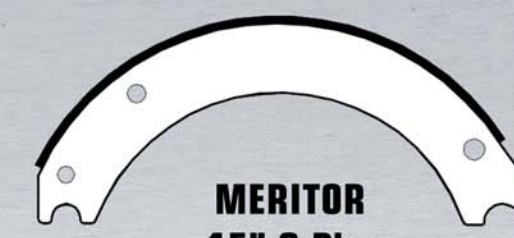

**MERITOR  
15" Q Plus**  
extended service shoes (double web)

Shoe #	Width	Lining
NS-4702Q	4"	4702
NS-4703Q	5"	4703
NS-4704Q	6"	4704
NS-4705Q	7"	4705
NS-4710Q	8 5/8"	4710

